


# Configurando o Yealink IP Phone

Após o telefone estiver ligado na energia e na rede WAN, pressione o botão OK.

Na tela de status ele irá mostrar o endereço IP para que possamos acessá-lo, copie este para a barra de endereços do seu navegador e pressione ENTER.

Esta é a tela de acesso as configurações do Yealink

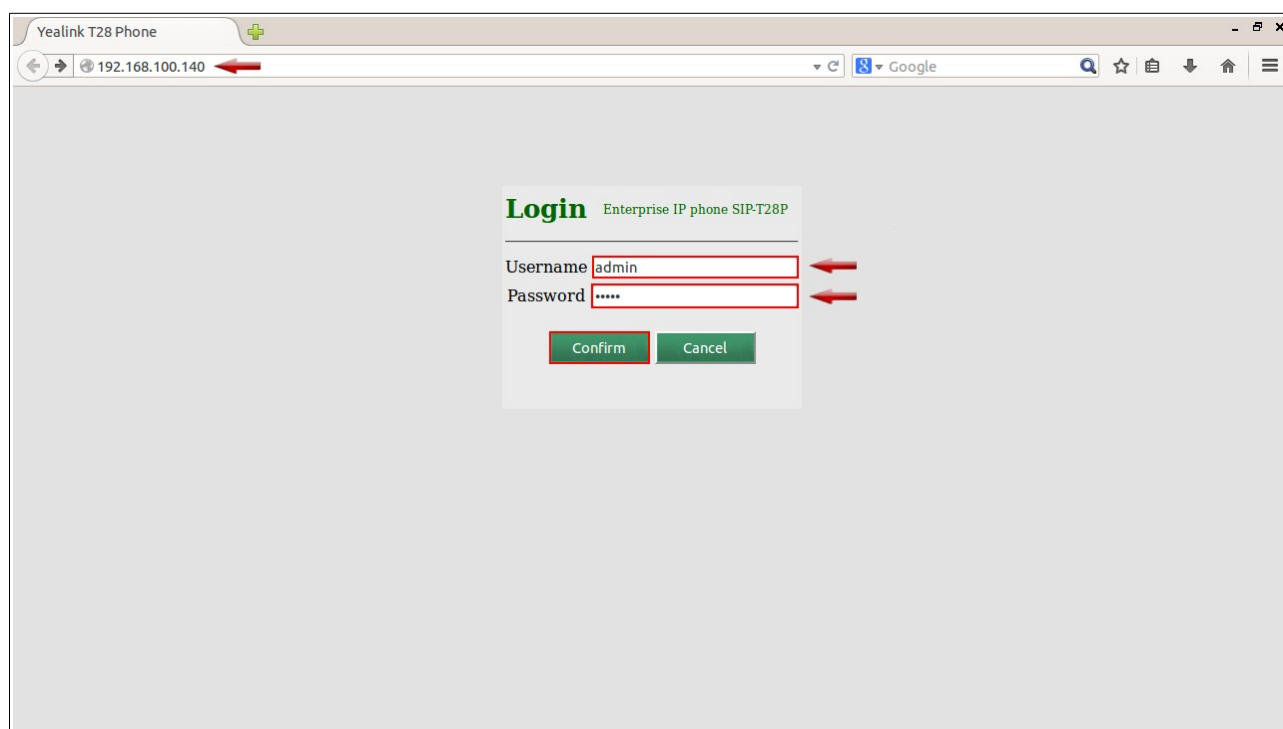


O usuário e senha padrão é:

**Username:** admin  
**Password:** admin


Após inserir estes dados de usuário e senha, clique em Confirm para acessar a página de

configurações

Esta é a tela Principal das configurações, Clique na aba Account na parte superior da página, destacado no exemplo abaixo:

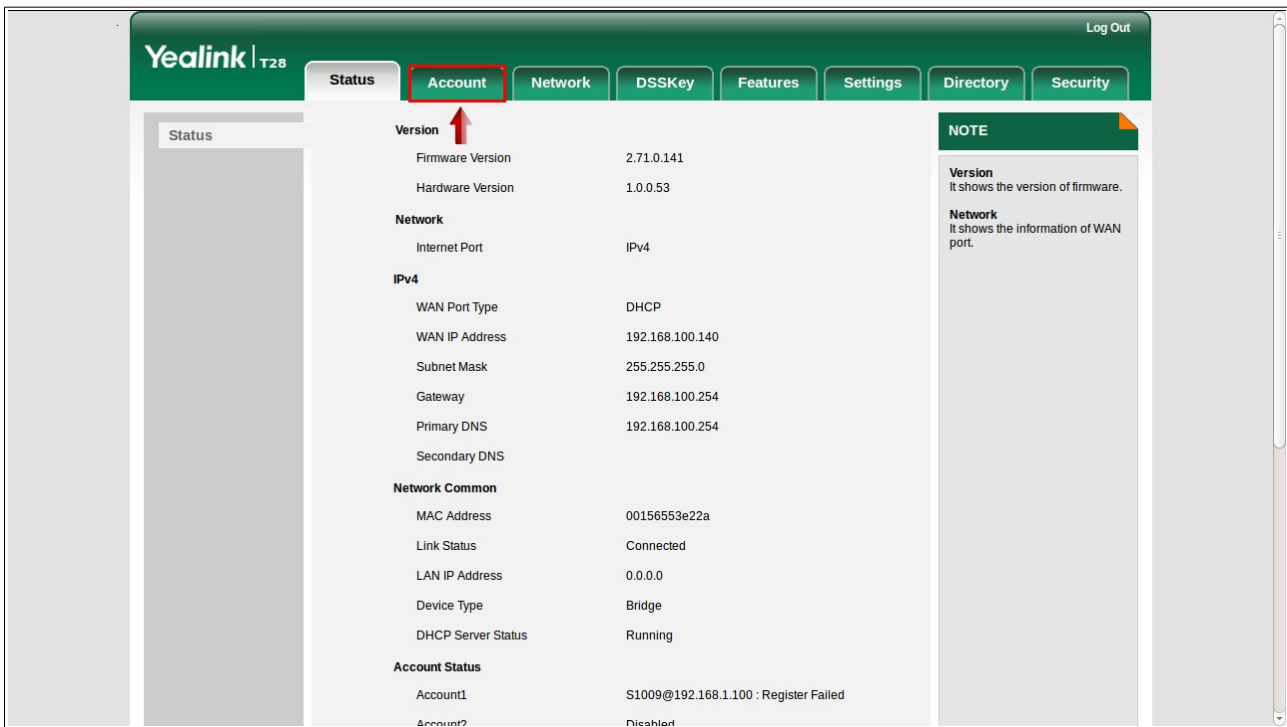

Você irá alterar os campos que abaixo estão destacados em vermelho.

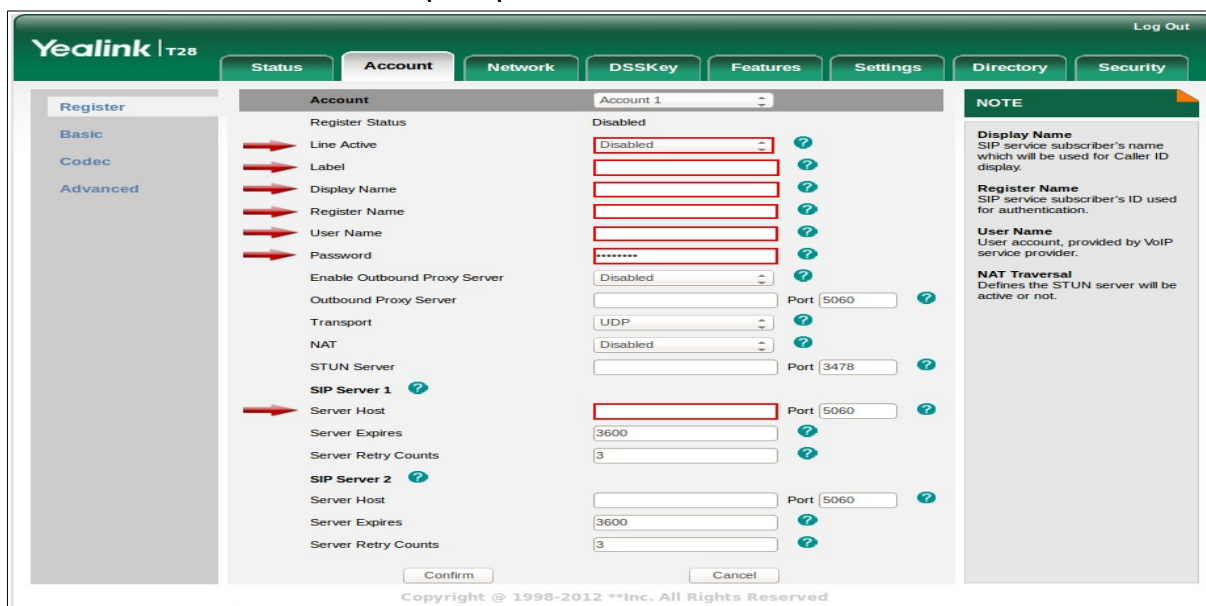

**Line Active:** Enabled

**Label:** Nome que irá aparecer na tela do telefone


**Display Name:** Nome que irá aparecer na tela do telefone

**Register Name:** Usuário para autenticação no PABX

**Password:** Senha para autenticação no PABX

**Server Host:** IP do PABX

Abaixo está um **exemplo** já preenchido .

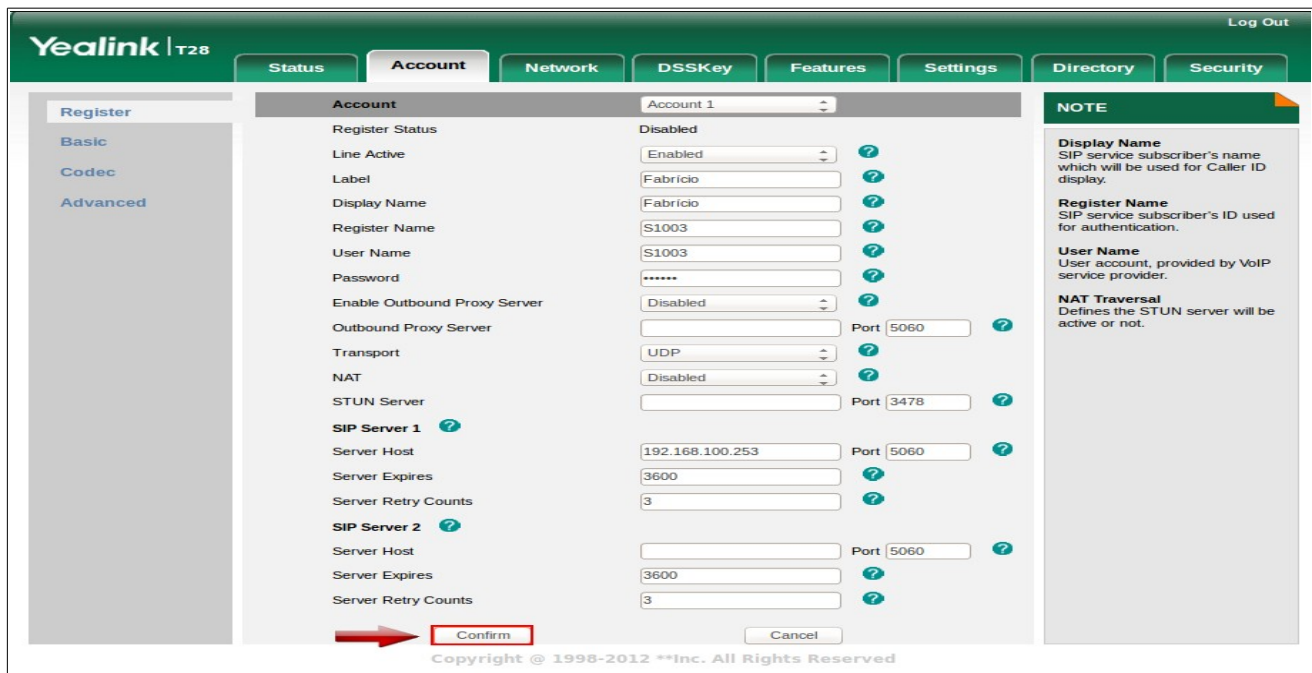


The screenshot shows the 'Account' configuration page for 'Account 1' in the Yealink T28 web interface. The 'Account' tab is selected, and the 'SIP Server 1' and 'SIP Server 2' sections are visible. A red arrow points to the 'Confirm' button at the bottom of the form.

Field	Value	Port
Register Status	Disabled	
Line Active	Enabled	
Label	Fabricio	
Display Name	Fabricio	
Register Name	S1003	
User Name	S1003	
Password	*****	
Enable Outbound Proxy Server	Disabled	
Outbound Proxy Server		5060
Transport	UDP	
NAT	Disabled	
STUN Server		3478
SIP Server 1 - Server Host	192.168.100.253	5060
SIP Server 1 - Server Expires	3600	
SIP Server 1 - Server Retry Counts	3	
SIP Server 2 - Server Host		5060
SIP Server 2 - Server Expires	3600	
SIP Server 2 - Server Retry Counts	3	

**NOTE**

- Display Name**  
SIP service subscriber's name which will be used for Caller ID display.
- Register Name**  
SIP service subscriber's ID used for authentication.
- User Name**  
User account, provided by VoIP service provider.
- NAT Traversal**  
Defines the STUN server will be active or not.

Copyright © 1998-2012 \*\*Inc. All Rights Reserved

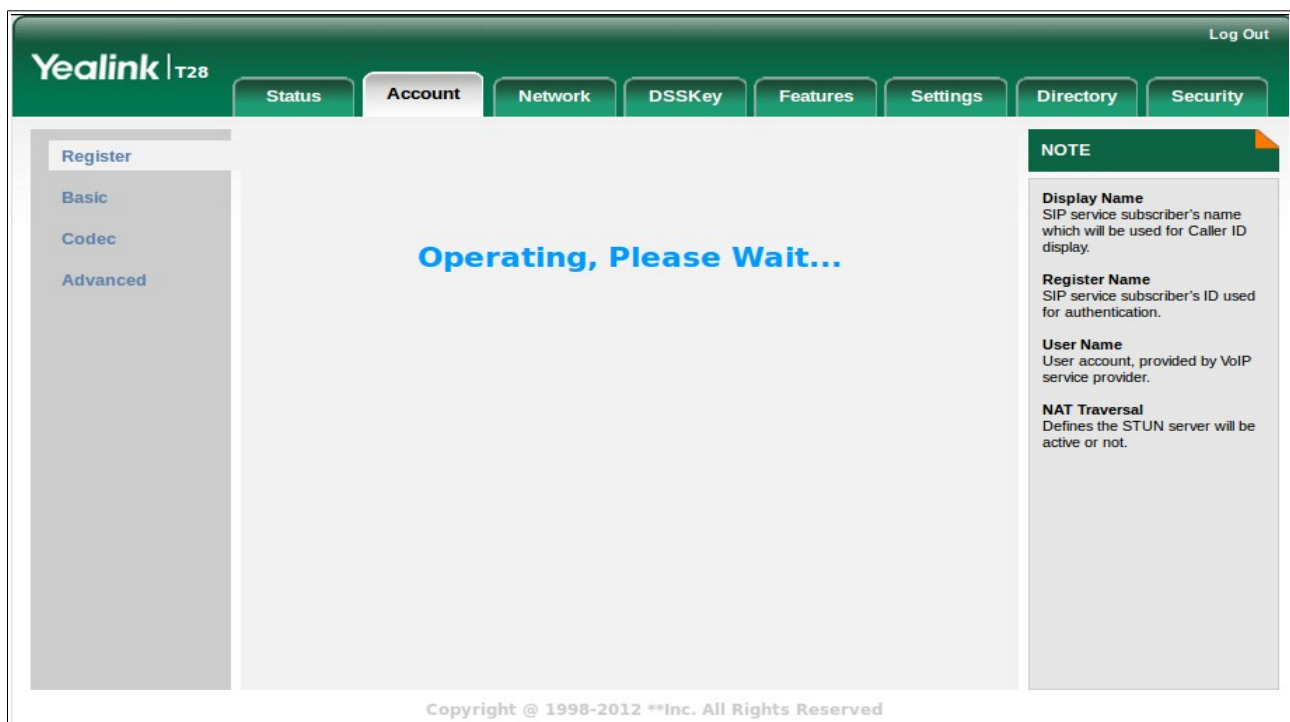

The screenshot shows the 'Account' configuration page for 'Account 1' in the Yealink T28 web interface. The page is in a loading state, displaying a large blue message: 'Operating, Please Wait...'. The 'Confirm' button is no longer visible.

**NOTE**

- Display Name**  
SIP service subscriber's name which will be used for Caller ID display.
- Register Name**  
SIP service subscriber's ID used for authentication.
- User Name**  
User account, provided by VoIP service provider.
- NAT Traversal**  
Defines the STUN server will be active or not.

Copyright © 1998-2012 \*\*Inc. All Rights Reserved

Quando clicar em confirm, você verá a tela a seguir:

Clique na aba superior DSSKey depois em Line Key ao lado esquerdo da tela.

Feito isso, você irá alterar todos os valores destacados em vermelho para Line 1

Depois que alterar, clique em confirm.

Yealink | T28

Log Out

Status Account Network **DSSKey** Features Settings Directory Security

Memory Key

**Line Key** ←

Programable Key

Ext Key

Key	Type	Value	Label	Line	Extension
Line Key1	Line			Line 1	
Line Key2	Line			Line 1	
Line Key3	Line			Line 1	
Line Key4	Line			Line 1	
Line Key5	Line			Line 1	
Line Key6	Line			Line 1	

→ Confirm Cancel

**NOTE**

**Key Type**  
The free function key 'Types' Speed Dial, Key Event, Intercom.


**Key Event**  
Key events are predefined shortcuts to phone and call functions.

**Intercom**  
Enable the 'Intercom' mode and it is useful in an office environment as a quick access to connect to the operator or the secretary.

Copyright © 1998-2012 \*\*Inc. All Rights Reserved

Clique agora em Programable Key do lado esquerdo da tela, em Softkey altere de DND

para Status depois confirme.

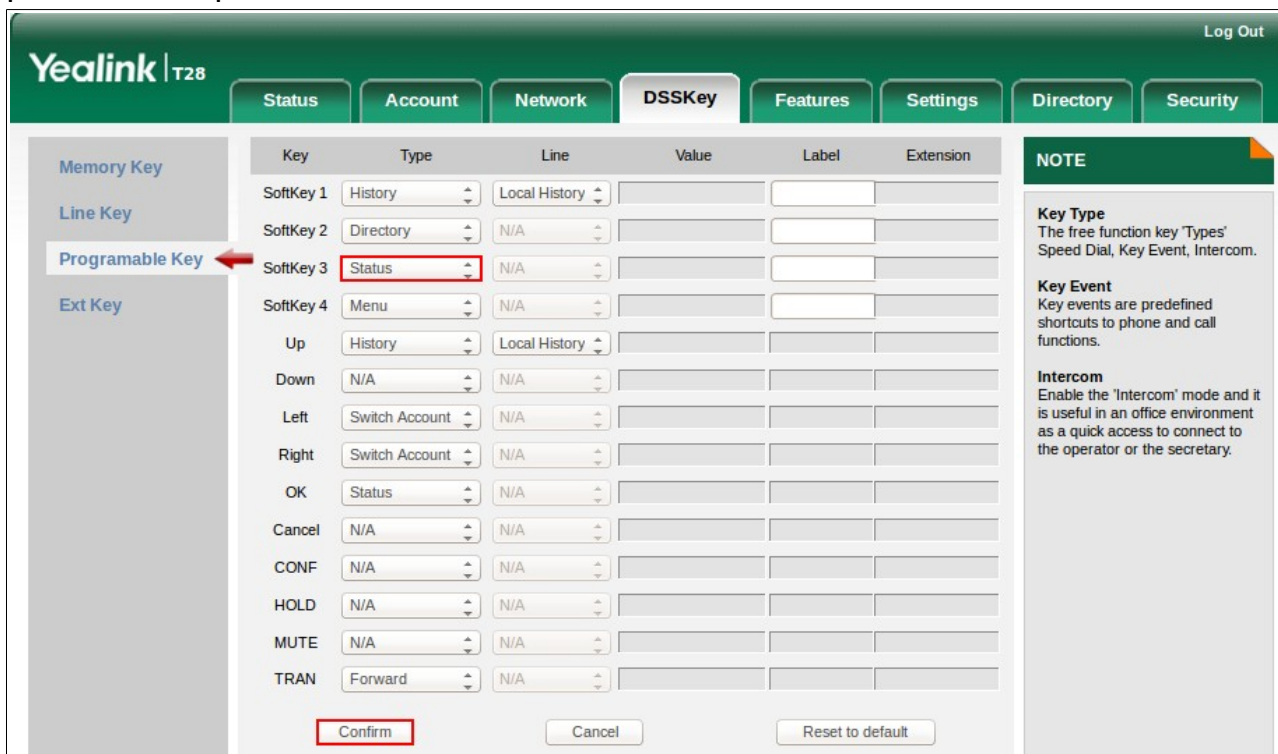

**Yealink | T28** Log Out

Status Account Network **DSSKey** Features Settings Directory Security

Key	Type	Line	Value	Label	Extension
SoftKey 1	History	Local History			
SoftKey 2	Directory	N/A			
SoftKey 3	Status	N/A			
SoftKey 4	Menu	N/A			
Up	History	Local History			
Down	N/A	N/A			
Left	Switch Account	N/A			
Right	Switch Account	N/A			
OK	Status	N/A			
Cancel	N/A	N/A			
CONF	N/A	N/A			
HOLD	N/A	N/A			
MUTE	N/A	N/A			
TRAN	Forward	N/A			


**NOTE**

**Key Type**  
The free function key 'Types' Speed Dial, Key Event, Intercom.

**Key Event**  
Key events are predefined shortcuts to phone and call functions.

**Intercom**  
Enable the 'Intercom' mode and it is useful in an office environment as a quick access to connect to the operator or the secretary.

Clique agora em Settings e no campo language selecione Português ,depois confirme.

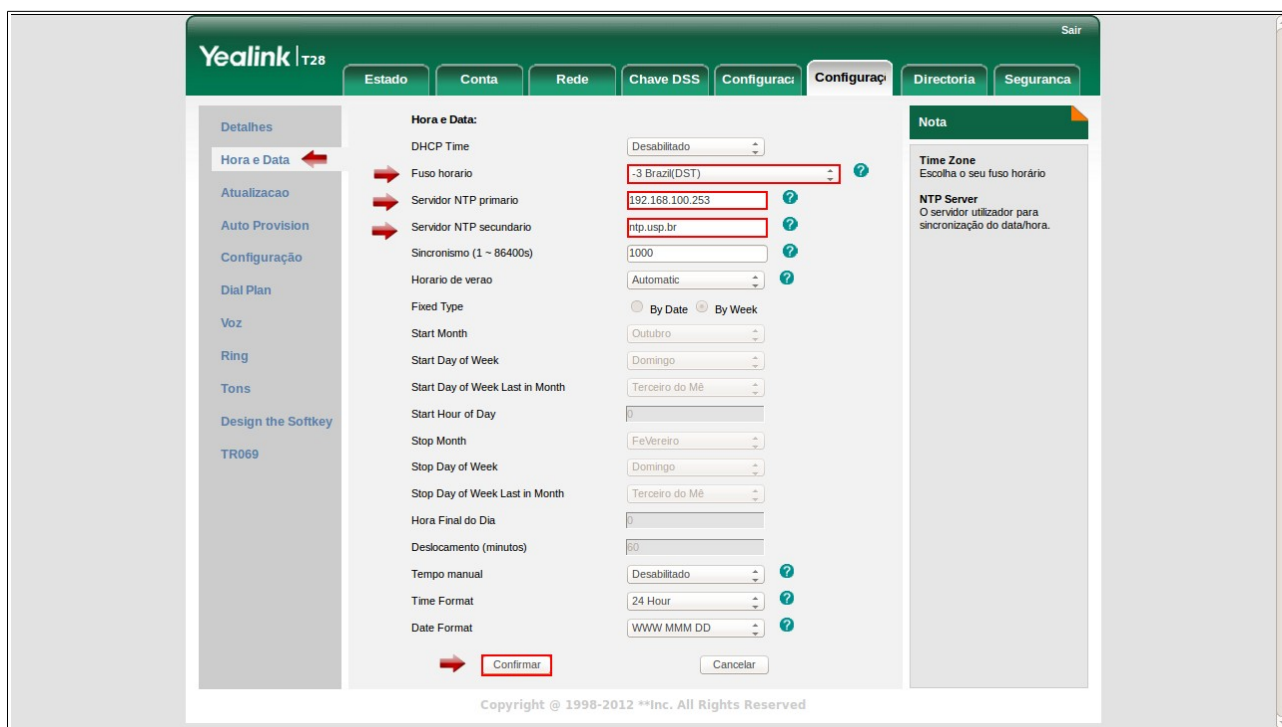

Pronto , após clicar em confirmar o telefone já vai estar configurado.